

Appendix A

Jumper Table Summary

Selecting the CPU Frequency

<u>JP1</u>	<u>JP2</u>	<u>JP3</u>	<u>CPU Frequency Ratio</u>	<u>JP6</u>	<u>JP5</u>	<u>CPU External Clock</u>
2-3	1-2	2-3	1.5x	1-2	1-2	66MHz (default)
1-2	1-2	1-2	2x	2-3	2-3	60MHz
1-2	1-2	2-3	2.5x			
1-2	2-3	1-2	3x			
1-2	2-3	2-3	3.5x			
2-3	1-2	1-2	4x			
2-3	1-2	2-3	4.5x			
2-3	2-3	1-2	5x			
2-3	2-3	2-3	5.5x			
1-2	1-2	1-2	6x			
1-2	1-2	2-3	6.5x			
1-2	2-3	1-2	7x			
1-2	2-3	2-3	7.5x			
2-3	1-2	1-2	8x			

<u>INTEL Pentium II</u>	<u>CPU Core Frequency</u>	<u>Ratio</u>	<u>External Bus Clock</u>	<u>JP3 & JP2 & JP1</u>	<u>JP6 & JP5</u>
Klamath 200	200MHz =	3x	66MHz	1-2 & 2-3 & 1-2	1-2 & 1-2
Klamath 233	233MHz =	3.5x	66MHz	2-3 & 2-3 & 1-2	1-2 & 1-2
Klamath 266	266MHz =	4x	66MHz	1-2 & 1-2 & 2-3	1-2 & 1-2

Jumper Table Summary

Clear CMOS

<u>JP14</u>	<u>Clear CMOS</u>
1-2	Normal operation (default)
2-3	Clear CMOS