


## Jumper Settings Quick Reference

### Front Panel Connector (J1)

<b>HDD LED</b>	VCC	1	2	Pwr LED+	<b>Pwr/Slp LEDs</b>
	LED	3	4	Slp LED+	
<b>Reset Switch</b>	Ground	5	6	Switch	<b>Power Switch</b>
	Switch	7	8	Ground	
<b>Infrared</b>	IR +5V	9	10	SN_NMI	
	IR RX	11	12	Ground	
	Ground	13	14	no connect	
	IR TX	15	16	no connect	

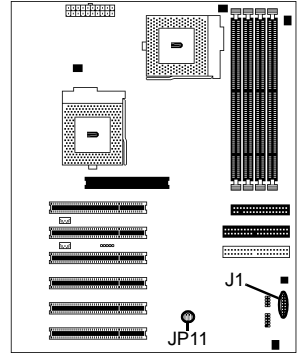

### CMOS Reset (JP11)

<b>JP11</b>	1-2	2-3
	Normal	Clear

If you have been locked out of your system because you forgot your password or set the CMOS incorrectly, or have just finished flashing your BIOS follow the instructions below.

1. Power off the system, and disconnect the power supply
2. Close pins 2-3 on JP11 (see mini-map for location of JP11)
3. Wait about three seconds
4. Move jumper back to 1-2, then power on the system again

By following this procedure, you will erase your password and reset the CMOS.