


Jumper Settings Quick Reference

Front Panel Connector (J17)

| | | | | | |
|--------------|--------|----|----|------------|--------------|
| HDD LED | VCC | 1 | 2 | Pwr LED+ | Pwr/Slp LEDs |
| | LED | 3 | 4 | Slp LED+ | |
| Reset Switch | Ground | 5 | 6 | Switch | Power Switch |
| | Switch | 7 | 8 | Ground | |
| Infrared | IR +5V | 9 | 10 | SN_NMI | |
| | IR RX | 11 | 12 | Ground | |
| | Ground | 13 | 14 | no connect | |
| | IR TX | 15 | 16 | no connect | |
| | CHIN2 | 17 | 18 | no connect | |

*Power LED: for 2-pin (bi-color/ single-color) LED, refer to the table (see left)

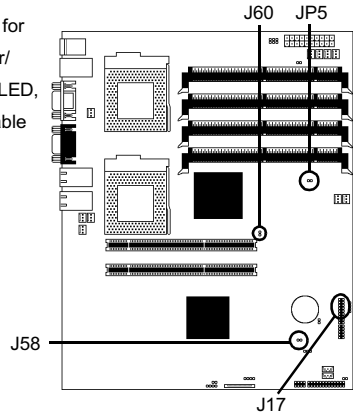

CMOS Reset (J58)

| | | |
|------------|---------|--------|
| J58 | open | close |
| | disable | enable |

If you have been locked out of your system because you forgot your password or set the CMOS incorrectly, follow the instructions below.

1. Power off the system, and disconnect the power supply
2. Close J58 (see p. 11 for location of J58)
3. Wait about three seconds
4. Open J58, then power on the system again

By following this procedure, you will erase your password and reset the CMOS.

CPU Front Side Bus Select (JP5)

| | | |
|------------|-------------|--------------|
| JP5 | open | close |
| | 133/100 MHz | 100 MHz only |

* default for JP5 is OPEN

Selection of the front side bus (FSB) speed can be set using this jumper. Please note that if your CPU does not have 133 MHz FSB, opening JP5 will not cause the CPU to run at 133 MHz FSB speed.

NOTE:

Tyan takes no responsibility and will not be held liable for damage related to the alteration of this jumper from the correct setting corresponding to your CPU manufacturer's designated front side bus speed.

PCI Speed Configuration (J60)

| | | |
|------------|--------|--------|
| J60 | open | close |
| | 66 MHz | 33 MHz |

* default for J60 is CLOSED

Check Tyan's website for updates on the PCI speed:
<http://www.tyan.com>

You have the option of changing the speed of the onboard PCI slots to either 66 MHz or 33 MHz, depending on your PCI expansion card's specifications. Check your PCI expansion card's documentation for details on it's specifications.

NOTE:

Tyan takes no responsibility and will not be held liable for damage related to the alteration of this jumper from the correct setting corresponding to your PCI card manufacturer's designated operating speed.

INSTALL